

CRT SS 9900 expand freq operation

In power off status, press **【MENU】** + **【BAND】** together to open radio, turn **【PUSH】** to select HF. BAND, Freq Range: 28.0000–29.6950MHz

Freq Name	Channel No.	Freq Range	Remark
A	40CH	28.0000–28.1950MHz	
B	40CH	28.2000–28.3950MHz	
C	40CH	28.4000–28.5950MHz	
D	40CH	28.6000–28.7950MHz	
E	40CH	28.8000–28.9950MHz	
F	40CH	29.0000–29.1950MHz	
G	40CH	29.2000–29.3950MHz	
H	40CH	29.4000–29.5950MHz	
I	20CH	29.6000–29.6950MHz	Default

In power off status, press **【MENU】** + **【BAND】** together to open radio, turn **【PUSH】** to select CB. BAND, Freq Range: 25.6150–30.1050MHz

Freq Name	Channel No.	Freq Range	Remark
A	40CH	25.615–26.005MHz	Default
B	40CH	26.065–26.505MHz	
C	40CH	26.515–26.955MHz	
D	40CH	26.965–27.405MHz	
E	40CH	27.415–27.855MHz	
F	40CH	27.865–28.305MHz	
G	40CH	28.315–28.755MHz	
H	40CH	28.765–29.205MHz	
I	40CH	29.215–29.655MHz	
J	40CH	29.665–30.105MHz	